



ATO

Operation Process

KEEP HOLDING SET KEY until to enter Alarm parameter setting

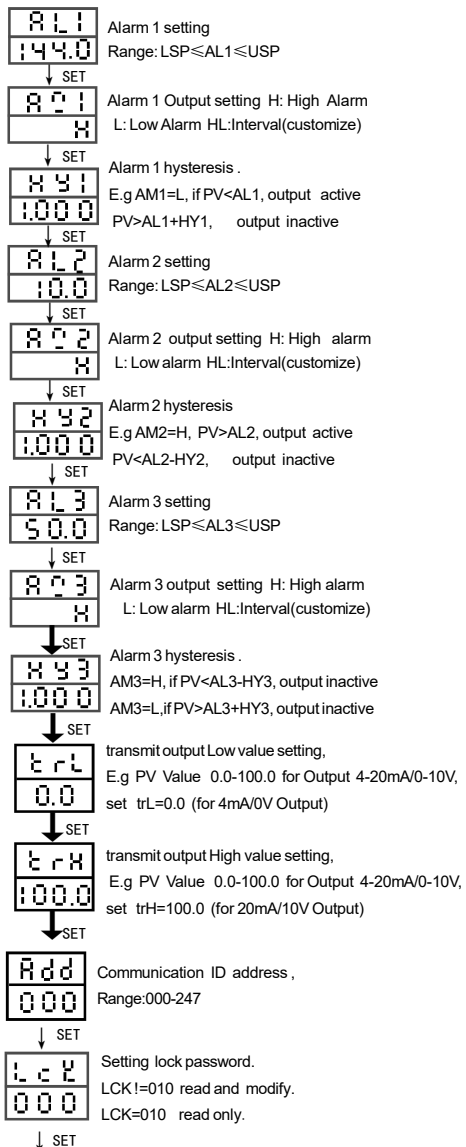


Return to AL1 parameter OR keep holding SET key to quit

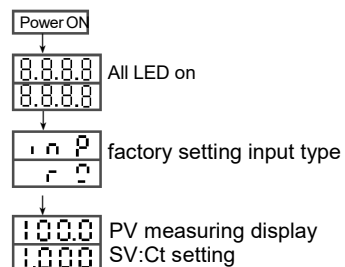

Following menu can be available FOR FA8 5 DIGITS





Press UP and DOWN KEY at the same time until to enter menu

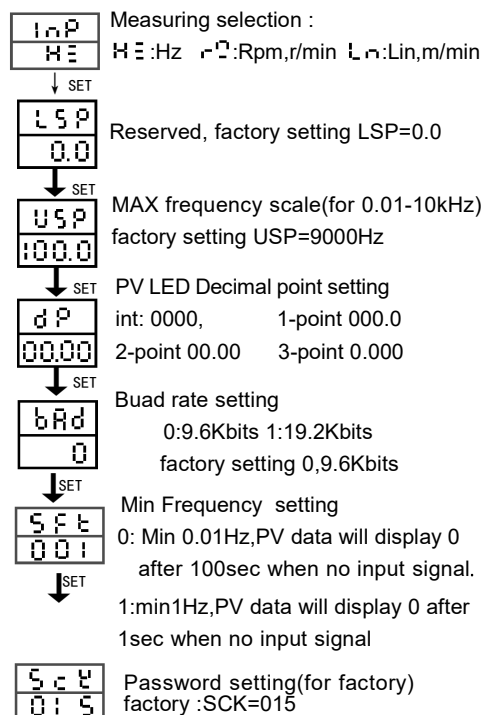


Press SET Key Return Inp parameter OR press UP and DOWN KEY at the same time until to quit

Terminal Configurations


(refer to the lable on meter if any change)

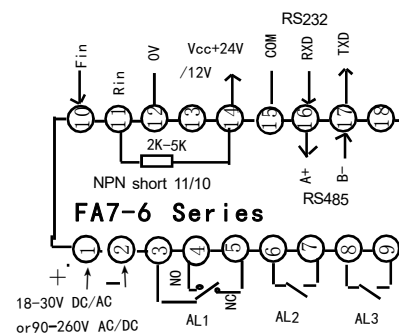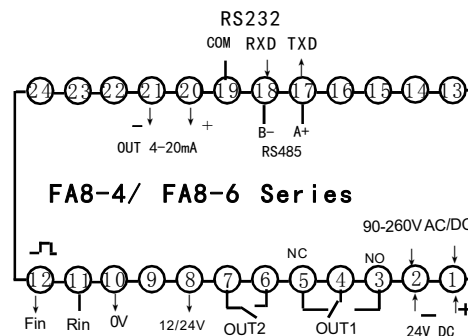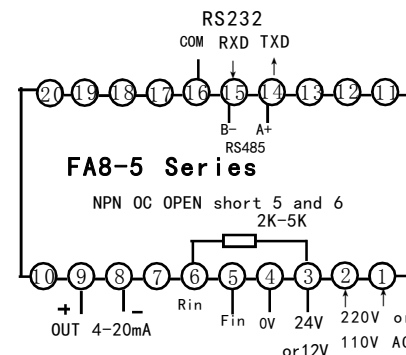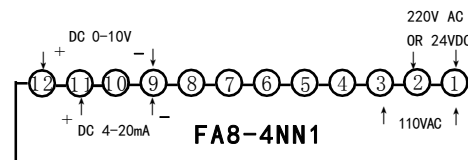


Connecting to sensor

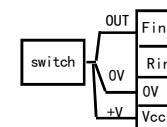


Connect to PNP switch

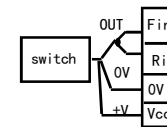


Connect to NPN switch

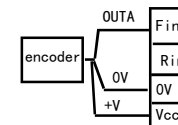


Connect to PNP encoder or wheel

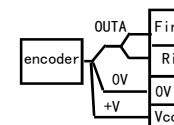

Connect to NPN encoder or wheel

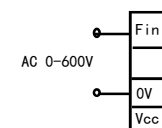

Connect to AC0-300-600V

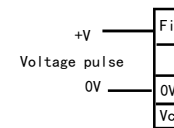

Connect to Voltage pulse or TTL/CMOS pulse

Complete Products Contains

- ★1 copy of user manual,
- ★1 inspection QC label,
- ★2 installing brackets,

We are responsible for the overall repairment for the failure of manufacturing quality within 12month since the date of purchase. Repair fee will be charged accordingly for damage caused by improper use..

Main Products

- Counter & length meter
- Timerelay
- Temperature controller
- Panel meter
- Frequency/Tacho/Line-speed meter
- Proximity sensor Photo-electrical sensor
- Ampere & Voltage Power meter
- Transmitter
- Sensor indicator
- Power adjustor