

Configuration Instruction

Before configuration, please power on the device and connect to the computer through the serial port.

1: Open Configuration Tool, click **Read**

Convention 8024G-20231219

HeNan Fosensor Technology

Serial Config

Serial

Baud Rate 115200

Data Bit 8

Stop Bit 1

Check Bit No Parity

Open Serial

Parameters

MQTT Server Address Write

MQTT Server Port Write

MQTT Client ID Write

User Name Write

User PassWord Write

Wifi Name Write

Wifi PassWord Write

Publish Interval S Write

Temperature °C Write

Device Number

Version

Product Type

Subscribe Topic

Publish Topic 1

Publish Topic 2

Read Clear Warning Info Reset

2: Configuration parameters following below steps as below picture.

(1) MQTT server Address: fosensorcloud.com and click write.

(2) MQTT server port: 1883 and click write.

(3) MQTT Client ID: XXXXXX and click write.


(4) User name: admin and click write.

(5) Password: 123456 and click write.

(6) Wifi name: XXXXXX and click write.

(7) Wifi key: XXXXXX and click write.

(8) Click Reset

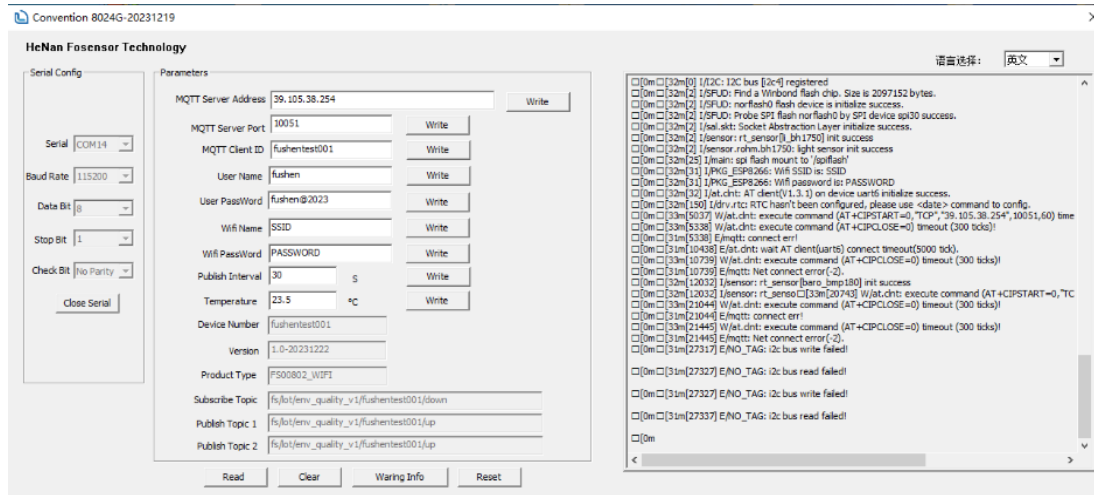

Note:

The mqtt server login information consists of the server address, port number, user name, and password, which need to be set by the user according to the requirements.

1: 4G products only need to configure the server login information for mqtt, and other Settings are not required.

2: WIFI products only need to configure MQTT server login information, but also need to set WIFI account and password.